

Score Clock Setup/Reset

If the score clock needs to be setup for the first time or loses its pre-set “13:00” minute setting then follow these instructions to fix the issue.

On the **TIMER** panel:

1. Press the “**CLEAR**” button.
2. Press the “**M+**” button 13 times to advance the timer to “13:00” minutes.
3. Press the “**START/STOP**” button to start the timer and let it run for a few seconds.
4. Press the “**START/STOP**” button to stop the time.
5. Press the “**RESET**” button.
6. Power the clock off and then back on again.

The clock should automatically reset to “13:00” minutes, ready for the next period.

After a period ends, simply press “**RESET TIMER**” to reset back to “13:00” minutes.

Since a shot clock is not used by the V&DABA, follow these instructions if the shot clock is automatically set to anything other than “0”.

On the **SHOT CLOCK** panel on the right side:

1. On the shot clock panel, use the “**S-1**” button to toggle down to “**0**”.

On the **TIMER** panel:

2. Press the “**START/STOP**” timer button and let the timer run a few seconds.
3. Press the “**START/STOP**” button to stop the timer.
4. Push the “**RESET TIMER**” button to lock in the shot clock setting to “0”.
5. Power the clock off/on and the shot clock should automatically retain the “**0**” setting.